

Real Pro's Tip Sheet

Hot Tips from
www.luremaking.com

Visit Our Web Site...
www.luremaking.com

REAL PRO'S UNGLUED CRANKBAIT BODIES

Real Pro's crankbaits are high quality unglued injection molded bodies. Each body comes in two halves. Just insert the figure "8" wire forms and rattle beads then glue and paint.

Reasons to Glue and paint your own crankbaits.

- Save up to 90% over brand name baits.
- Paint them in your own secret fish catching colours.
- Customize the weight of each bait: Floating - sinking - suspending
- No special tools required.

Gluing Instructions:

1. Separate the halves of each crankbait and line up all of the male and female halves in two rows.


2. On the male halves locate the pins which will hold the figure "8" wire forms. You should see a small groove in the body beside each pin which requires a figure "8" wire form.

3. Slide the open end of the figure "8" over each of the pins and ensure the figure "8" is properly placed in the groove with the closed eye extending outside the crankbait body.

4. Insert the desired number of rattle beads into the male half before gluing. We recommend 3 to 5 medium beads in each of the crankbaits except the rattleshads. The 2" should have least 30 and the 3" should have least 40 small rattle beads in the front chamber. For the rattleshads to work properly they must be forward weighted, this is very important.




Figure "8" Wire Form

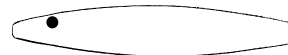

3-3/4" Real Pro's Flutter



3" Walleye

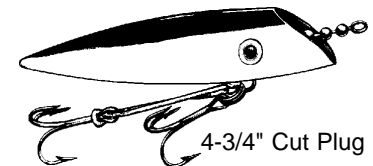

4-3/4" Cut Plug



3" Popper




2-1/2" Prop Jack



2-1/2" Topwater Blurp



3" Deep & Medium Shotter

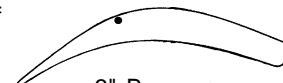

3" Bannana



2", 3" & 4" Rattle Shad



2-3/4", 3", 3-1/2", & 4-1/2" Divers

5. Now using a small paint brush apply a generous amount of *Testors Plastic Cement* (*ABS Cement and MEK also Work Well*) on the edges of both halves (male and female) of the crankbait body being glued. Be careful not to allow too much cement to run inside the body.

6. Carefully snap the two halves together and hold tightly with your fingers or clamp for approximately 60 seconds.

7. Allow to dry for 1 hour before painting.

NOTE: Testors plastic cement is available at most hobby shops.

NOTE: Prop baits use screw eyes instead of figure 8's. Apply generous amount of *Testors Plastic Cement* or MEK to each screw before screwing into your bait.

Crankbait Component Check List

Real Pro's
SPORTFISHING

	Use Wire Form	# of Wire Forms Req'd	Bead Size	Treble Hook Size*	# of Treble Hooks Req'd	Split Ring Size	# of Split Ring Req'd
2-3/4" Bass Diver	402 (F), 277(R)	3	Medium	6	2	3	3
3" Medium Diver	462	3	Medium	6	2	3	3
3-1/2" Deep Diver	392	3	Medium	4	2	3	3
4-1/2" Deep Diver	402	3	Medium	2	2	3	3
2" Rattle Shad	227	3	Small	8 (R) 6(F)	2	3	3
3" Rattle Shad	277	3	Small	6 (R) 4(F)	2	3	3
4" Rattle Shad	473	3	Medium	4 (R) 2(F)	2	3	3
3" Minnow	277	3	Medium	8	2	3	3
4 1/4" Minnow	462	4	Medium	6	3	4	4
3" Walleye	277(F), 277-250 (R)	3	Medium	6	2	3	3
3" Deep Shotter	402	3	Medium	6	2	3	3
3" Medium Shotter	277	3	Medium	6	2	3	3

*R = Rear Hook F = Front Hook

Phone (519) 371-3766 • Fax: (519) 371-3754 • Email: info@luremaking.com